

Shade Tracks

Installation Instructions

Maximum Size 60 x 72 Opening



Required for installation

1. Flat Blade Screw Driver
2. Tape Measure
3. Level
4. Masking Tape 1 Inc
5. Optional Foam tape 1/8 x 3/4 Inch

1. Install Shade brackets-Spring on Left looking out.
2. Wind Tension on Spring Drive with included wrench (see instruction sheet)
3. Install Shade in Brackets with Angle Cut Up (see instruction sheet)
4. Close Bracket Lock on Drive Side
5. Remove paper wrap and operate the shade by the Handle. If the internal stop catches reverse the spring driver in the brackets. (see #3)
6. There must be 1/4 clearance between the ends of the bottom rail and Tracks.
7. Install one Shade Track square to the shade and 1/8 clearance from the Bottom Bar. Base the height starting from the bottom. Use masking tape to temporarily hold the Track in place. If trimming is required cut from the Top of the Track.
8. Pull shade down by the Handle and align 2nd Track. Use masking Tape to temporarily hold in position 1/8 from the Bottom Bar and test fit. Be sure the vertical height of both Tracks match so the shade will lock level. Base this from the bottom up.
9. Operate the shade confirming that it locks in the lowest slots (A). Shade should lock in the upper slots too. The Handle will prevent the shade from rolling too high.
10. If alignment is correct secure Track with included screws. Locate every four inches equal to the cut outs (B). Do not over tighten!

Optional Foam Tape Use if the mounting surface is hard metal or smooth tile that may be difficult to drill.

Solar-Screen
Co. Inc.

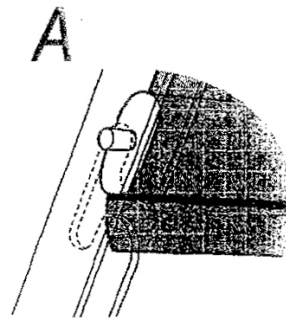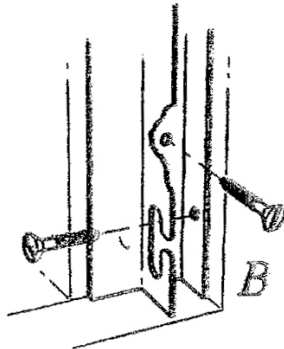

Shade Tracks Install