

BREAKTHROUGH CORD CONNECTOR

The breakthrough cord connector applies to Standard and Top-Down Bottom-Up shades. *Cordloop shades do not have a Breakthrough Cord Connector.*




To avoid entanglement and strangulation, keep cords out of the reach of young children. Move cribs and furniture away from blind cords.


To further reduce hazards, this shade was built with a cord connector which was designed to break apart when force is applied from the top.

No safety system is fail-safe. KEEP CORDS OUT OF REACH OF SMALL CHILDREN!


If your cord connector should happen to break apart, follow the instructions below to reassemble.

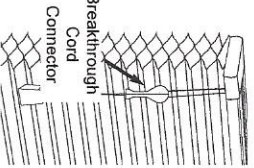

When the connector is open, each side has a cord coming in, at the top, one side has a cord coming in from the bottom.

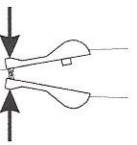

Fit the bottom edges together. The side with the cord fits into the middle without the cord.



Swing the top ends together and press in the middle to fully connect.

PROTECT YOUR CHILDREN

Be aware that it is possible for children to strangle in window covering cords. To reduce the occurrence of accident, all cords must be kept out of the reach of children, including infants. Cord cleats and Tensioner devices are an effective way to implement this essential precaution.

Standard and Top-Down Bottom-Up

Mount the cord cleat at a safe height, taking into account furniture or other objects upon which a child may climb. Then, after each use of the shade, simply wrap the excess cord around the cleat. It's fast, easy and safe.



Continuous Loop Shades

Install Tension Device

The tension device reduces the hazards of strangulation and entanglement of young children by limiting access to the control cord.

Attention!

The cord tensioner must be installed to make the shade fully operable.

Please read the instructions included in the mounting hardware packet prior to installation.


LEVEL THE BOTTOM RAIL (IF NECESSARY)

Cellular Side Track shades use a system that allows easy leveling of the bottom rail. It is designed to make slight adjustments (less than 1") to level the moving rails of your shade. It is not designed to make length adjustments.

Use a flat head screwdriver or a coin (a quarter works best) to turn the adjustment screw to raise or lower that side of the bottom rail. The adjustment screw is on the underside of the bottom rail.

One quarter turn of the screw will move the bottom rail up or down approximately 1/4".

Over-turning the adjustment screw (more than 1" of adjustment) can cause the cord to tangle or wedge inside the rail. The screw should turn easily - Do Not Force.

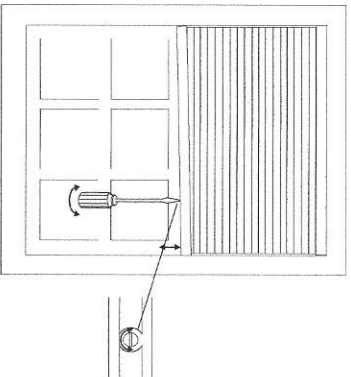

TROUBLE SHOOTING

Problem: Shade is difficult to operate, especially near the top.
Cause: Brackets and Side Track may not be properly aligned.

Repair: Adjust brackets as necessary so the track is centered in the bottom rail end cap.

CLEANING AND CARE

The Shade fabric is easy to care for. Regular dusting with a feather duster or vacuum cleaner brush is recommended. Most stains can be blotted with a damp sponge and mild detergent. For problem stains, the shade can be removed from the installation brackets and soaked in warm water. When damp, raise shade tightly to re-crisp pleats.

ENERGY EFFICIENCY

Your Comfortex shade with Comfortrack is designed to block the loss of heat through your windows while preserving the opportunity to enjoy the "free" energy available from direct sunlight.


For maximum energy savings in most windows, the shade should be fully lowered to enhance insulation during non-daylight hours.

In sunlight windows, a net solar energy gain may be achieved during the heating season by opening the shade during bright daylight hours to admit energy from sunlight into the interior room space.

152052

Rev D

11/8/12

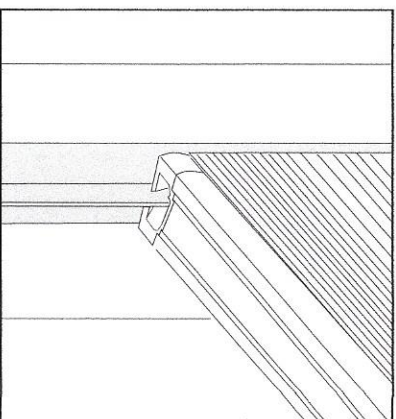

Side Track

Energy Saving Shade System

Shallow Mount Application

Installation Instructions

Our window fashions represent a design breakthrough in style, efficiency and function. Our Cellular shades feature 100% non-woven polyester fabric providing a soft diffused light and high level of privacy. The unique hardware system is designed to provide years of reliable service when properly installed.


Please take a few minutes to read through these instructions before beginning.

BASICS

A few simple tools are required:

- Measuring tape
- Power drill, drill bits
- Hex head and/or Phillips driver bit
- Pencil

Additional fasteners other than those sent with your shade may be required depending on the mounting surface. Wallboard and plaster require the use of anchors such as expansion or toggle bolts. Brick, tile or stone need special plugs and drill bits. Remember to always pre-drill holes in wood to avoid splitting.




Standard and Top-Down Bottom Up Installation Bracket



Continuous Loop, Cordless and Down/Bottom UP Installation Bracket



Shallow Mount Adapter with Magnet



Side Track Rail with Magnet

The minimum required depth for shallow mount installation is 1/2" for Standard Shades and 3/4" for Continuous Loop and Cordless Shades.

BRACKET INSTALLATION


Shades are shipped with the required number of brackets for proper installation. End brackets should be located with centerlines 3-1/2" in from each end. Depending on the width of the shade, additional brackets may be necessary evenly spaced between the two end brackets.

For shade widths of:	Use this Number of brackets:
Up to 40"	2
40" - 72"	3
72" - 84"	4
84" and up	5

Standard Brackets

The brackets are mounted flat against the top sill surface.

The minimum depth required is 1/2".

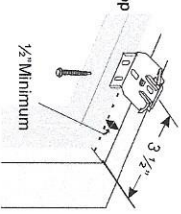


Continuous Loop and Cordless Brackets

The brackets are mounted flat against the top sill surface.

The minimum depth required is 3/4".

Note: Release tab is at the bottom of the bracket

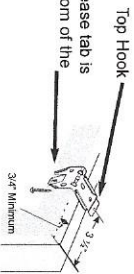


SHALLOW MOUNT ADAPTER INSTALLATION

Standard Brackets

Align the back of the adapter with the back of the installation bracket.

Mark the hole positions. Pre-drill the holes to avoid splitting.

Attach the adapter with the screws provided.

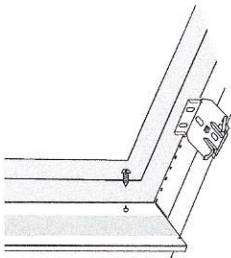

Continuous Loop and Cordless Brackets

Position the back of the adapter 1/8" forward of the back of the bracket.


Mark the hole positions. Pre-drill the holes to avoid splitting.

Attach the adapter with the screws provided.

Mark the positions of the brackets on the back lip of the headrail.

Use a razor knife to remove the fuzz bar from the rail at the bracket positions.

The headrail can not securely attach to the bracket if the fuzz bar is not removed from the bracket positions.

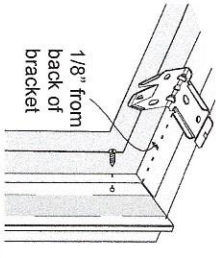


SHADE INSTALLATION

Unwind the cord from the shade. Bring the top rail up near the installation brackets. Center the shade in the window opening and attach the headrail to the installation brackets.

Standard Brackets

Insert the front clip of the installation bracket into the front groove of the rail.


Push the rail back and up until the back clips of the bracket are inserted in the back groove of the rail.

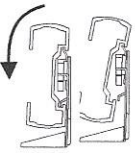

Continuous Loop and Cordless Brackets


Position the headrail with the front lip (A) resting on the top hooks of all brackets. Make sure no fabric is pinched between the bracket and headrail. Be sure that the rail is centered in the window opening.

Push the bottom of the headrail firmly upwards and toward the window until the groove at the bottom of the headrail snaps into place. (B) as shown.

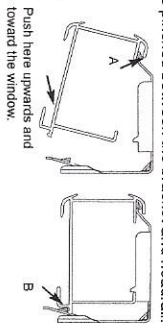

Carefully slide the top of the track into the notch in the shade, making sure that the Z seal is toward the back and push up.

Let the track snap onto the magnet. Repeat for the other side.

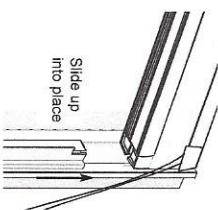

OPERATION

Standard Shades

To lower or release shade, pull the cord inward toward the center of the shade. To raise or lock the shade, pull the cord straight down and outward toward the edge of the shade.

Top-Down Bottom Up

One cord will raise or lower the bottom rail; the other cord will raise or lower the top. Pull the cord inward toward the center of the shade to lower or release shade. Pull the cord straight down and outward toward the edge of the shade to raise or lock the shade.

Continuous Loop Shades

Operate the shade by pulling down on one side of the cord. - The front cord raises the shade, the rear cord lowers the shade.

Do not lift the bottom rail with your hands. Also, be careful not to place objects on the window sill that will interfere with operating the shade or cause it to hang unevenly.

Cordless Shades

To lower the shade, pull down on the handle which is secured to the bottom rail. To raise the shade, push the bottom rail up. The shade will hold at any position when the bottom rail is released.

Cordless Shades Top-Down Bottom Up

To lower the shade, pull down on the handle which is secured to the middle or bottom rail. To raise the shade, push the middle and bottom rail up. The shade will hold at any position when the middle or bottom rail is released.

